

Thermakraft™



## Installation Guide

# WATERGATE PLUS

### New Zealand's premium all-purpose, fire retardant wall wrap.

Watergate Plus is specifically designed as a wall underlay behind exterior wall cladding. Made from synthetic materials Watergate Plus is fire retardant, water resistant and vapour permeable. The water vapour transfer rate of the product has been optimised to minimise condensation risk in homes without compromising its primary water barrier properties.

Watergate Plus is part of the Thermakraft One Wrap System. Its unique construction allows for easier installation while maintaining best in class performance qualities.

Smarter products. Better buildings.  
**thermakraft.co.nz**



# Installation Guide

## Application Method

- Fix Watergate Plus underlay with printed side facing the exterior.
  - Fix to all exterior walls from below bearers to the top plate. Pull the Watergate Plus underlay tight and fix securely to the frame with fasteners such as galvanized Little Grippers, 6mm-8mm staples or 20mm large head galvanized clouts at 300mm centres horizontally and vertically. Additional fasteners should be used around each opening to be cut out. Fixing types and requirements for steel framed structure can be found in the MRM Code of Practice.
  - Watergate Plus underlays are available in widths of 2740mm and 1370mm. The 2740mm width product is generally wide enough to come from below the bottom plate to the top plate.
  - When fixing Watergate Plus underlay to Steel framing the same procedures applies, use adhesive spray or tape or flat head screws to fasten to the framing or thermal break, the exterior cladding fastenings will act as the permanent fixings.
  - Cover all windows and door openings with Watergate Plus underlay.
  - It is recommended that the Watergate Plus underlay is not cut and prepared for window installation until the arrival of the windows. minimum of 150mm lap is required at joins, all vertical laps must be made over studs. Horizontal laps to be laid ship lap style allowing water to be shed to the outer face of the membrane.
  - When windows and doors are ready for installation, the Watergate Plus underlay covering the openings should cut at 45° and folded into the opening and securely fastened. Thermakraft window flashing tapes are recommended as the window flashing system.
- Note:** In accordance with NZBC Acceptable Solution E2/AS1, wall underlay must be prevented from bulging into the drained cavity. Where stud spacing is greater than 450mm Thermakraft stud strap run horizontal at 300 centres is an acceptable means of prevention.
- Once installed, Watergate Plus must not be left exposed to the weather or UV for a maximum of 60 days. Watergate Plus underlays will provide temporary weather protection during construction allowing work to continue. Internal linings and insulation must not be installed until the exterior cladding is completed.
  - Fastenings behind Brick Veneer Cladding must have an equivalent service life to that of Brick Veneer (50 years). Refer to NZS 3604.

- Make good any forced tears with Thermakraft window flashing tapes. Any large areas which require repair may be covered with a second layer of underlay, a lap of 150mm is required.
- Watergate Plus underlay must be installed by a licensed building practitioner.



Fix securely to the frame with fasteners such as 6-8mm staples




On arrival of doors and windows, cut Watergate at each opening on a 45° angle away from each corner. Pull the Watergate flaps inside and fasten to the inside of frame.



## Application Tips

Unaffected by LOSP or other solvent based treated timber. However, LOSP or other solvent based treated timber must have sufficient time for the solvent chemical to flash off in a well ventilated area. Recommended minimum 7 days.

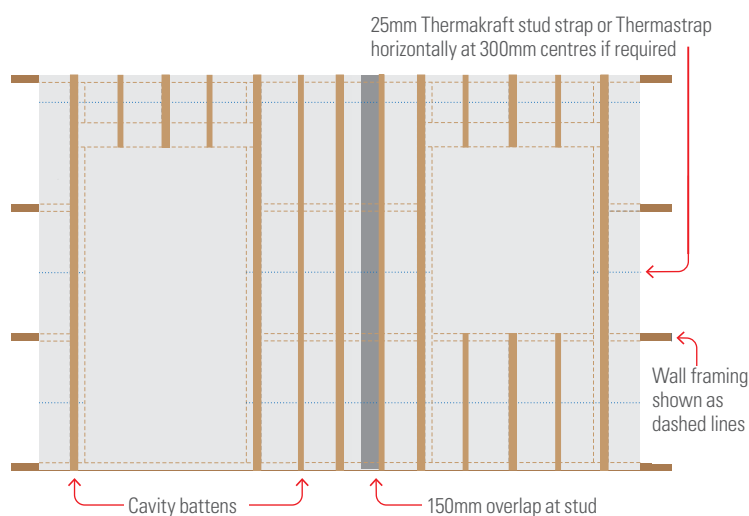

## Handling and Storage

Thermakraft Watergate Plus underlay must be handled with care to prevent damage such as tearing and roll deformation. Due to the width of the product, care should be taken when installing in windy conditions. The product must be stored under cover well away from direct moisture, rainfall contact and sunlight (UV). Care should be taken not stack other materials on top of the product.